



# Read Me First

## Powerware 5115 Rack-Mount UPS Internal Battery Connection Instructions

Use the following procedure to ensure proper battery operation before installing the UPS:

- 1 Verify that the UPS is off and unplugged.
- 2 Remove the UPS front panel.
- 3 Remove the protective label from the internal battery connector.
- 4 Connect the internal battery connector.  
**NOTE:** A small amount of arcing may occur when connecting the batteries. This is normal and does not damage the unit or present any safety concern.
- 5 Reinstall the UPS front panel.
- 6 Refer to the *Powerware 5115 Rack-Mount UPS User's Guide* for UPS installation instructions.

If the UPS requires any type of transportation in the future, disconnect the UPS internal battery connector using the above steps in reverse order. If you need additional assistance, refer to the user's guide for contact information.

